

## Hurricane Performance Canada Inc. ECU Flashing INSTRUCTIONS

### When installing Hurricane Flashes for the first time using the GAP Innovation Flasher

1. Please download the software into a **window based PC**.
2. Type: [gapinnovation.com/hurricane/](http://gapinnovation.com/hurricane/) into your address bar.
3. Then click on **DOCUMENTS** found across the top. Scroll down to **Gap Flasher PC** update software.
4. Click on **view** as found on red. Follow prompts to download the software into your PC.
5. Please download the **Gap Flasher app** on your cell phone from your APP store.



*\*Confirm firmware on Flasher is up to date  
\* Wi-Fi \*Bluetooth activated on phone*




*-Where to plug in Flasher: lift right side panel, down by reverse actuator (4 pin white connector connects to flasher cable) \*remove cap on the end of cable*

### Updating Flasher Firmware on Computer

1. Plug flasher into computer with USB cable
2. Open **Gap Flasher Updater** program
3. **Find device**
4. Select **Program Firmware**
5. Click on the newest firmware version
6. Updating firmware **Continue**
7. Once update is successful, unplug Flasher from computer



### Sending ECU infos from Sled with Phone

1. Plug Flasher into sled
2. Turn key, wake up sled
3. Open **GAP APP** on phone
4. **Search for tool** & **Connect** (*answer NO to bypass sign in/registering*)
5. Pull down **drop down arrow** at the top of the screen to open **Menu** ▼
6. Click (top left) 3 small lines to open **Main Menu**
7. Scroll down & select **ECU infos** – *ECU will be scanned* – **Continue**
8. **Comment** – input **Flasher number** (last 5 digits on the back of the Flasher)
9. Select (*at the bottom of ECU info screen*) the share box/envelope     
(auto populates Hurricane email)
10. **Send!** ECU infos will be sent to our email
11. Contact us at [613-925-2019](tel:613-925-2019) or by email [dave@hurricaneperformance.ca](mailto:dave@hurricaneperformance.ca) for confirmation *before* proceeding to next step



### Transferring Flash file: Computer to Flasher

1. Plug flasher into computer with USB cable
2. Open **Gap Flasher Updater** program
3. **Find device**
4. Select **Program Flash File Only**
5. 1 (or 2) files to be added, **Continue**
6. Once flash transfer is successful, unplug Flasher



### Transferring Flash file: Flasher to Sled

1. Plug Flasher into sled
2. Turn key, wake up sled
3. Open **GAP APP**
4. **Search for tool** - **Connect**
5. Pull down **drop down arrow** - **Menu** ▼
6. Click (top left) 3 small lines to open **Main Menu**
7. Scroll down & select **ECU Flash**
8. Select desired flash – proceed to flash sled
  - Flashing complete!

